



How To: Changing the trim on a steering wheel

Courtesy of **HiLaker**

Actually it is quite easy:

- remove three hex screws at the back of the steering wheel
- carefully remove trim assy (bottom first, than left side),
- remove another 6 hex screws, change the trim.