



## How To: Remove a door card

Courtesy of **skoov**

I thought I'd share my experience of taking off the door card(s) here and hopefully someone else might find it useful!

Here goes:

1. Remove the handle cover. This is clipped on with a series of, well, clips! You can see them on the photo, they're the silver bits. I used an ice scraper to get underneath the handle enough to squeeze my fingers in and then just pulled working my way from top to bottom.



2. With the handle cover removed, unscrew the two screws indicated by the red circles
3. Remove the screw near the door handle. There's a small cover hiding the screw which I

managed to remove with my fingers, eventually.



4. The card is now just held on with clips which pop off using quite a lot of force. I used the ice scaper again to squeeze between the door card and the door. Starting from the bottom.





5. Once I'd popped off a couple I was able to get my fingers in to do the rest working along the bottom, then up the sides and finally along the top.



6. The door card should hopefully then come off! I didn't bother un-clipping any wires and just got someone to hold the card whilst I added the new tweeter. You can see where the tweeter plugs into, indicated by the red circle.

