



How To: Remove the Centre Vents

Courtesy of **Simm31**

To remove:

1. There are 4 tabs along top edge
2. Gentle depress these in turn
3. Tilt whole vent unit towards you
4. Lift out
5. There is one cable connected to DTC/Hazards/Locking.

To replace back:

1. Just click back in.