



How To: Reset Tyre Pressure System (TPS) warning light

Courtesy of **ikki**

1. Start the engine.
2. Push the lever on the OBC stalk until INIT is shown on the display.
3. Push the button on the end of the LH stalk in once momentarily, the arrowhead will disappear.
4. Push the button on the end of the stalk in again, this time for about 5 seconds, when initialised a box with a tick in will be displayed next to the word INIT.
5. You can now drive off.